

THOR 320

Code: 75010




Elenco pezzi di ricambio / Liste pieces detachees Spare parts list / Ersatzteilliste Piezas de repuesto / Список запасных частей



From S/N:

No	Desc	Code	pcs per box
1	Pinza rossa / Red clamp / Rote Klemmplatte / Bridge rouge / Abrazadera roja / Плюсовой зажим	M611150SP	2
2	Pinza nera / Black clamp / Schwarze Klemmplatte / Bride noire / Abrazadera negra / Минусовой зажим	M611060SP	2
3	Cordone di alimentazione / Power cord / Zufuehrungsschnur / Cordon d'alimentation / Cordon de alimentacion / Электрический провод	M581110SP	5
4	Pannello assemblato / Assembly panel / Montierte Tafel / Panneau assemble / Panel asemlato/Передняя панель	S827311SP	1
5	Mantello anteriore / Front Mantle / Vorderer Umhang / Manteau avant / Передняя часть корпуса	S465507SP	1
6	Piedino / Support / Unterstuetzung / Appui / Ayuda / Опора	S086600SP	10
7	Mantello posteriore / Posterior Mantle / Hinterer Umhang / Manteau postérieur / Capa posterior / Задняя часть корпуса	S465516SP	1
8	Assale / Axle / Axe / Achse / Eje / Ось	M263285SP	6
9	Ruota posteriore fissa / Fix back wheelack wheel / Fixiertes Hinterrad / Roue postérieure fixe / Rueda posterior fija / Заднее колесо	S075100SP	10
10	Coperchio portafusibile / Fuse holder cover / Sicherung Halterabdeckung / Couverture de support de fusibile / Cubierta del sostenedor del fusible / Крышка держателя предохранителя	S070350SP	10
11	Fusibile / Fuse / Sicherung / Fusible / Fusible / Предохранитель	S298000SP	20
12	Maniglia / Handle / Handgriff / Poignée / Manija / Ручка	S070300SP	20

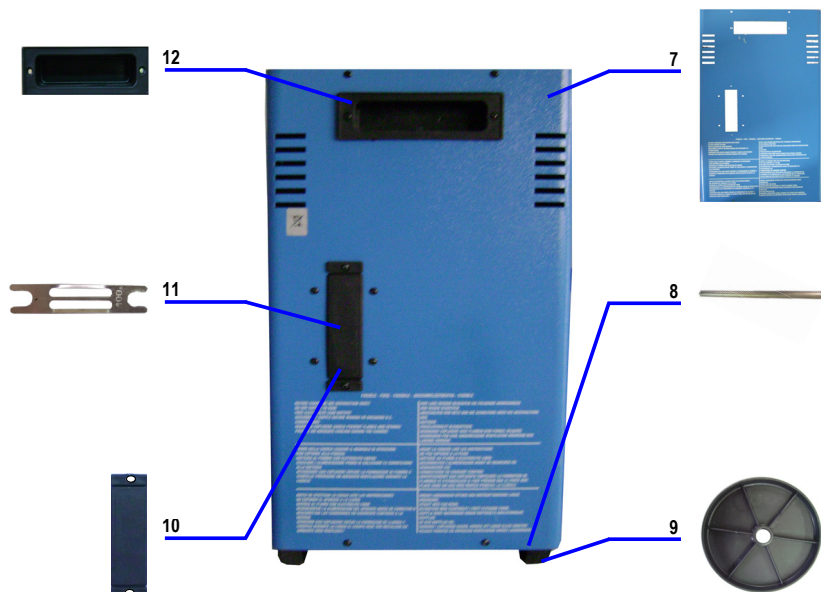


THOR 320

Code: 75010



Elenco pezzi di ricambio / Liste pieces detachees Spare parts list / Ersatzteilliste Piezas de repuesto / Список запасных частей

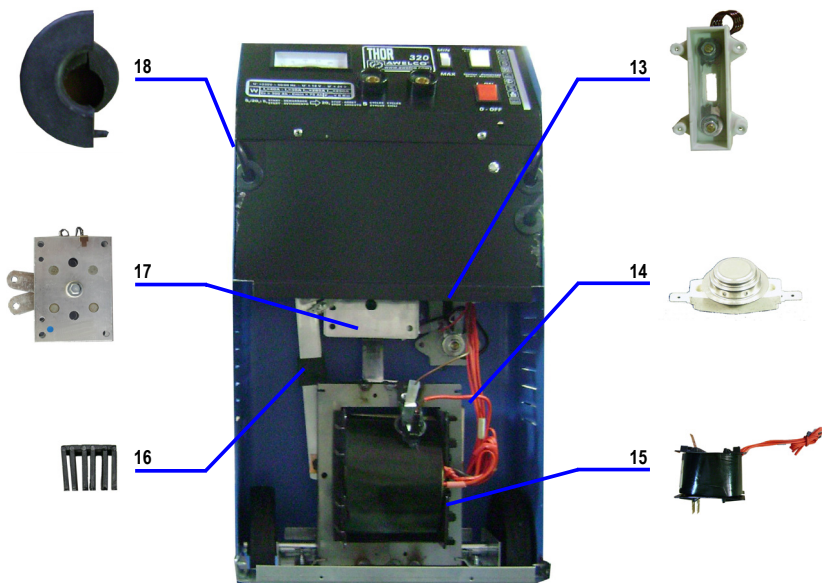

13	Portafusibile / Fuse holder / Sicherung Halter Support de fusible / Sostenedor del fusibile Держатель предохранителя	S816352SP	5
14	Termostato / Thermostat / Thermostat / Thermostate Thermostato / Термостат	M493500SP	10
15	Trasformatore di potenza / Power transformer Leistungstransformator / Transformateur de puissance Transformador de potencia / Трансформатор мощности	S783110SP	1
16	Pettine bloccabandella / Comb blocks hinge / Kamm fuer Scharnierblockierung / Peigne bloque la charniere Peine bloquea la bisagra / Изолирующая гребенка	S068500SP	20
17	Ponte raddrizzatore / Rectifier bridge / Gleichrichter Pont redresseur / Puenet rectificador / Диодный мост	M781560SP	2
18	Passacavo / Core hitch / Kabeldurchgang Passecable / Pasacable / Втулка	M382000SP	20