

# Kit 1571

**Audi A5**, 2-dr Coupé, 07- / \*08-


**Audi S5**, 2-dr Coupé, \*08-

**Audi A5 Sportback**, 5-dr Hatchback, 09- / \*10-



**Audi S5 Sportback**, 5-dr Hatchback, \*10-

Without glass roof


\*North America

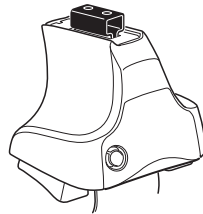

**754** Rapid System  
**480R** Rapid Traverse (North America)

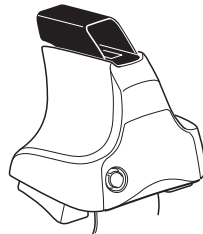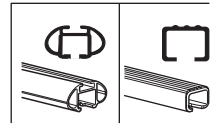


**480** Traverse (North America)

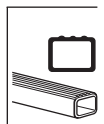





1

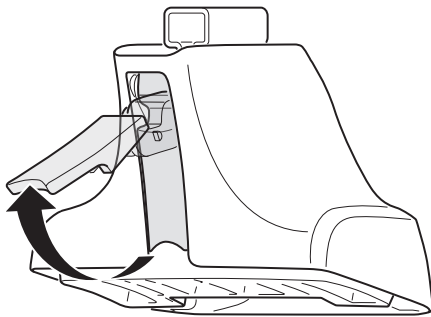



2





754 Rapid System  
480R Rapid Traverse  
(North America)

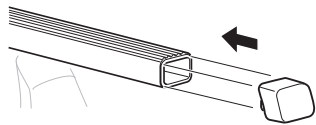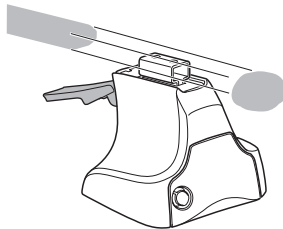

x4

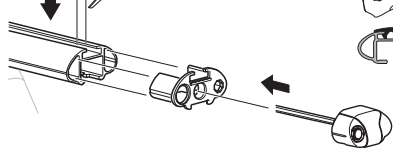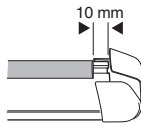



x4

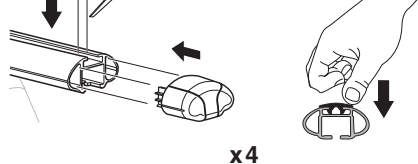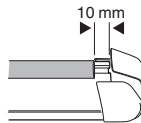

x4




480 Traverse  
(North America)

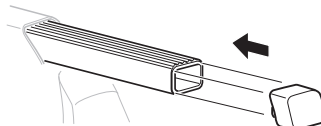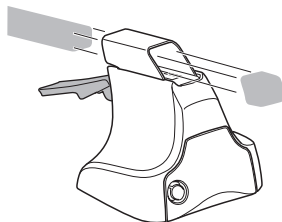


x4


3

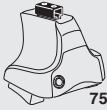

754 Rapid System

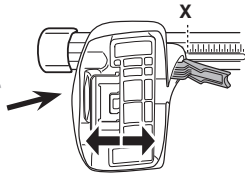

	X
<b>Audi A5, 2-dr Coupé, 07- / *08-</b>	39
<b>Audi S5, 2-dr Coupé, *08-</b>	39
<b>Audi A5 Sportback, 5-dr Hatchback, 09- / *10-</b>	39
<b>Audi S5 Sportback, 5-dr Hatchback, *10-</b>	39

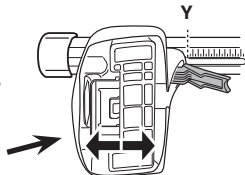

	Y
<b>Audi A5, 2-dr Coupé, 07- / *08-</b>	36
<b>Audi S5, 2-dr Coupé, *08-</b>	36
<b>Audi A5 Sportback, 5-dr Hatchback, 09- / *10-</b>	37
<b>Audi S5 Sportback, 5-dr Hatchback, *10-</b>	37

3




480R Rapid Traverse




480 Traverse

(North America)

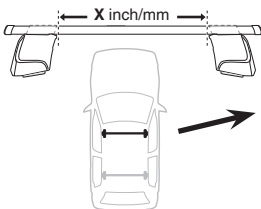


	X inch	X mm
<b>Audi A5, 2-dr Coupé, 07- / *08-</b>	41 "	1041 mm
<b>Audi S5, 2-dr Coupé, *08-</b>	41 "	1041 mm
<b>Audi A5 Sportback, 5-dr Hatchback, 09- / *10-</b>	41 "	1041 mm
<b>Audi S5 Sportback, 5-dr Hatchback, *10-</b>	41 "	1041 mm

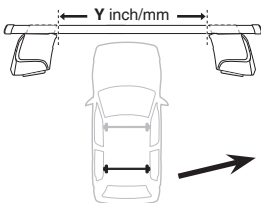


	Y inch	Y mm
<b>Audi A5, 2-dr Coupé, 07- / *08-</b>	39 <sup>3</sup> / <sub>4</sub> "	1011 mm
<b>Audi S5, 2-dr Coupé, *08-</b>	39 <sup>3</sup> / <sub>4</sub> "	1011 mm
<b>Audi A5 Sportback, 5-dr Hatchback, 09- / *10-</b>	40 <sup>1</sup> / <sub>4</sub> "	1021 mm
<b>Audi S5 Sportback, 5-dr Hatchback, *10-</b>	40 <sup>1</sup> / <sub>4</sub> "	1021 mm

4

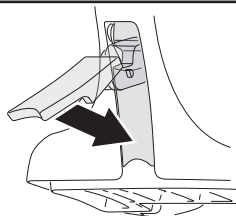


5


Audi A5, 2-dr Coupé, 07- / \*08-  
Audi S5, 2-dr Coupé, \*08-

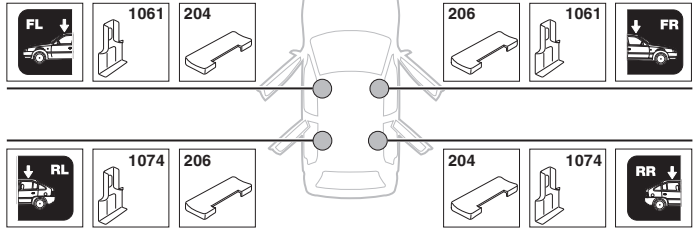


Audi A5 Sportback, 5-dr Hatchback, 09- / \*10-  
Audi S5 Sportback, 5-dr Hatchback, \*10-

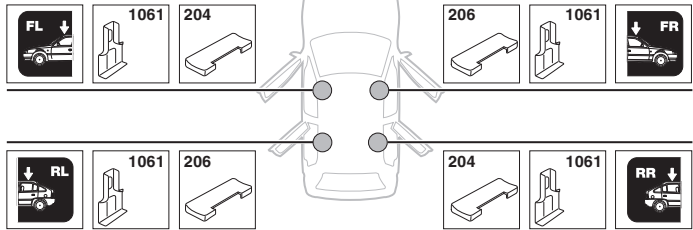





A

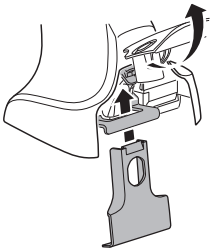



B

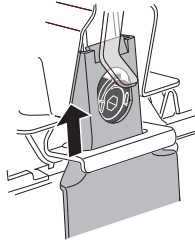



C

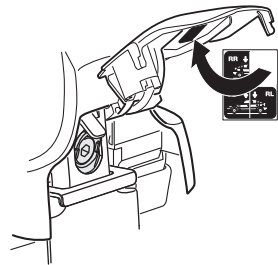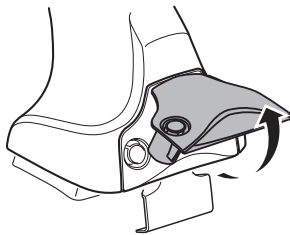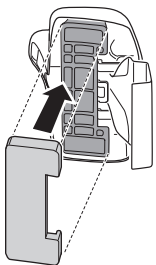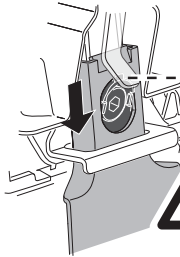


6

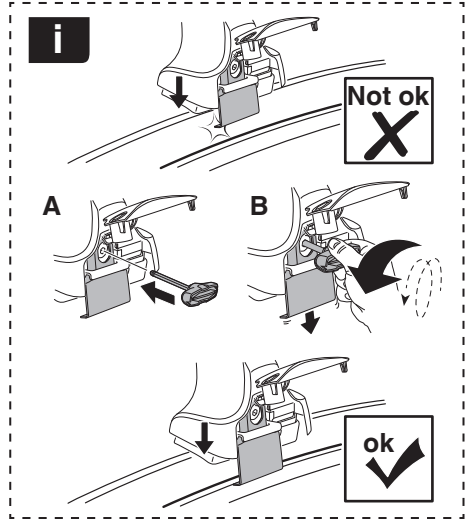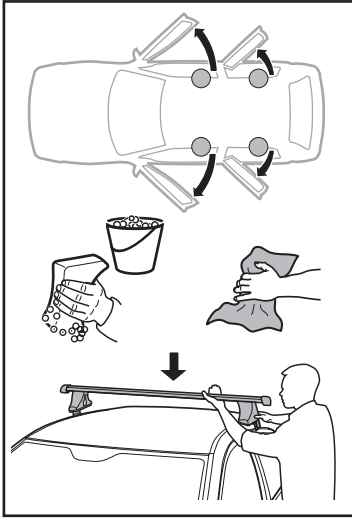

	X mm	Y mm	X inch	Y inch
<b>Audi A5, 2-dr Coupé, 07- / *08-</b>	180 mm	685 mm	7 1/8"	27"
<b>Audi S5, 2-dr Coupé, *08-</b>	180 mm	685 mm	7 1/8"	27"
<b>Audi A5 Sportback, 5-dr Hatchback, 09- / *10-</b>	140 mm	730 mm	5 1/2"	28 3/4"
<b>Audi S5 Sportback, 5-dr Hatchback, *10-</b>	140 mm	730 mm	5 1/2"	28 3/4"

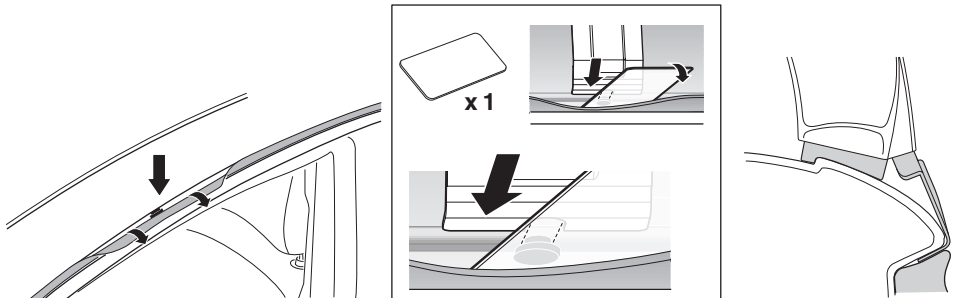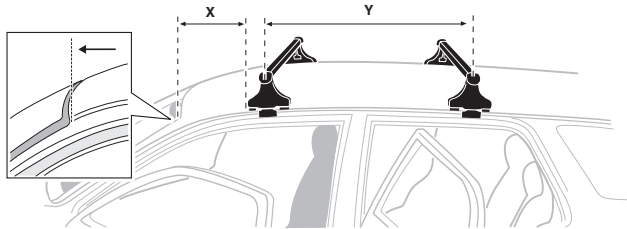

7

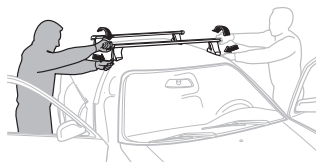

GB/US Tighten alternately  
 D Die Schrauben abwechselnd anziehen  
 F Serrer alternativement chaque côté  
 NL Afwisselend aan de linker- en de rechterkant aandraaien  
 I Alternare il serraggio delle viti  
 E Apretar alternativamente  
 PT Aperte alternadamente  
 S Dra åt växelvis  
 FIN Kierrä vuorotellen  
 EST Pinguldage vaheldumisi  
 LAT Pieļieciet pamišus  
 LIT Užsukinėkite pakaitomis  
 PL Śruby dokręcaj naprzemiennie  
 RU Затягивайте попеременно





CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.  
 SK Dofahajte striedavo  
 SLO Privijajte izmenično.  
 HR Naizmjerno zategnite  
 HU Egymástól függetlenül szorítandó  
 GR Σφιγίγες εναλλάξ  
 TR Dönüşümlü sıkın

中文 交替拧紧



한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

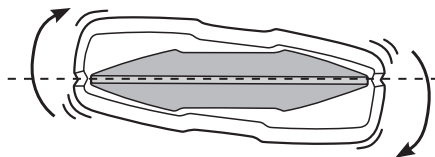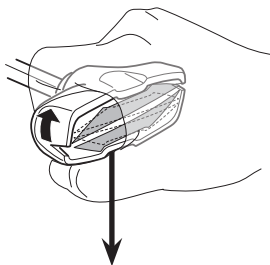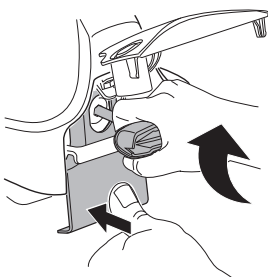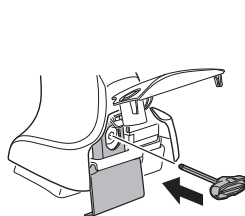



≈ 3 Nm


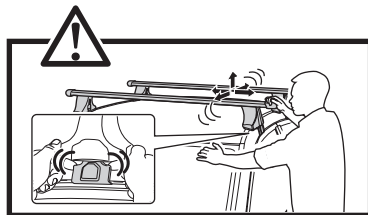
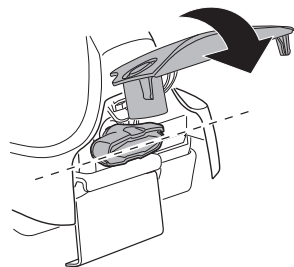


8




x1  
17 mm

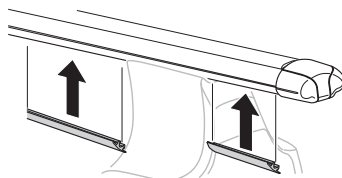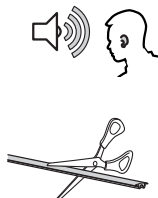


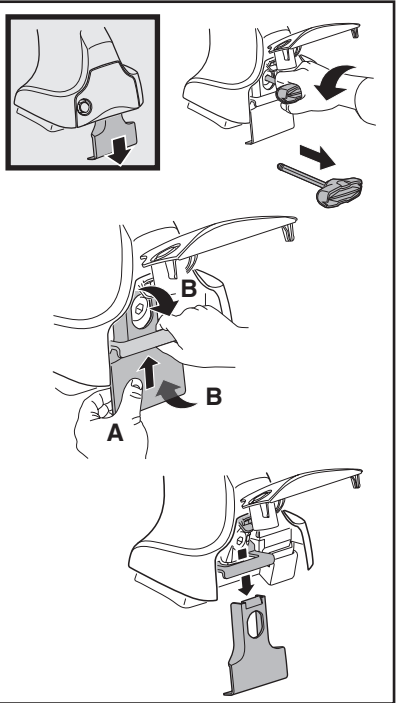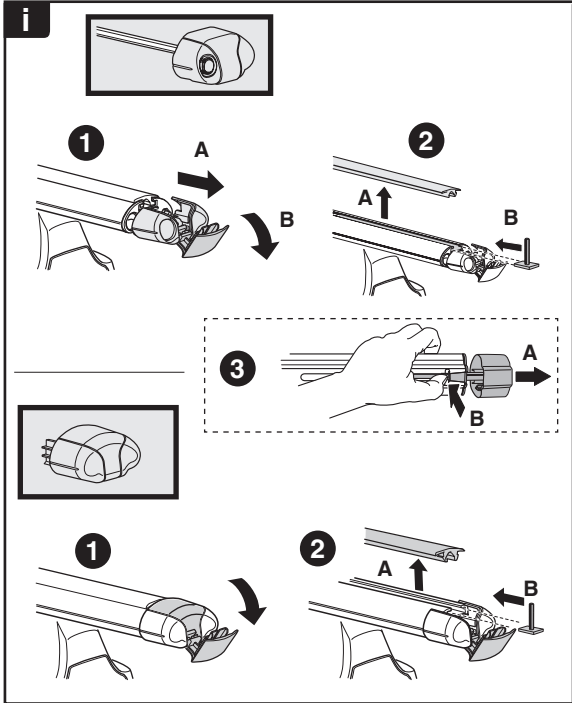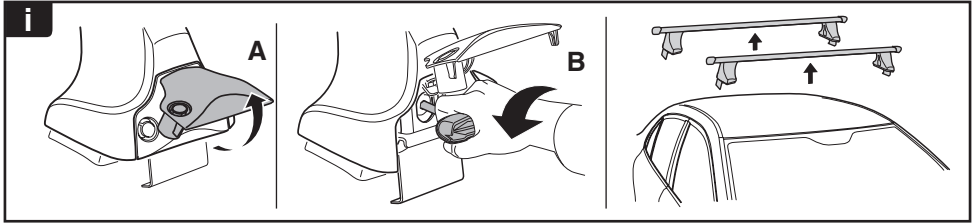

**THULE**  
SWEDEN  
**ONE  
KEY  
SYSTEM**

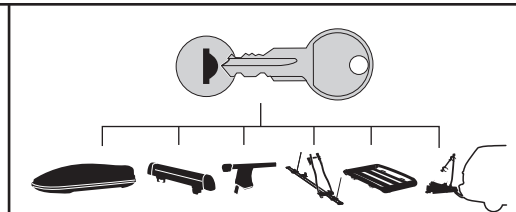

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		

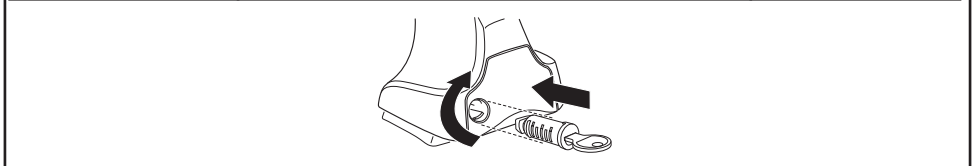

WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN  
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com  
customer.service@thule.com

www.thule.com