
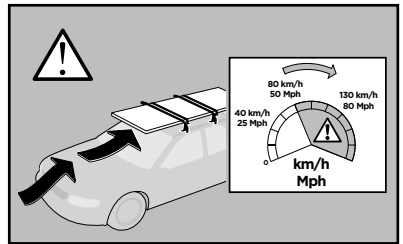
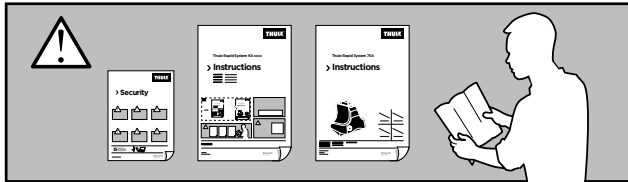
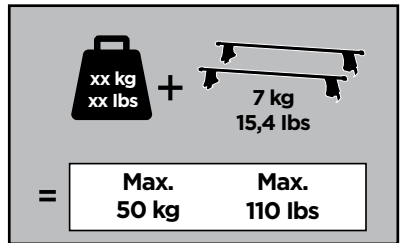


Thule Rapid System Kit 1691

> Instructions

HONDA CR-V, 5-dr SUV, 12- (Without railing)

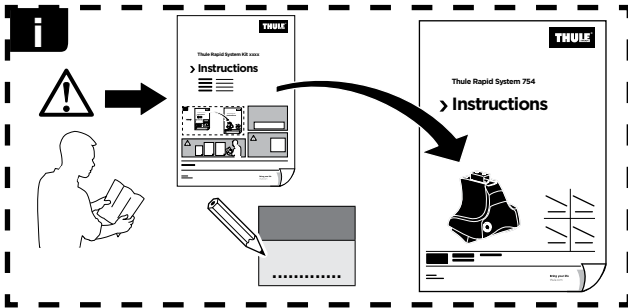

ISO 11154-E


141691

C.20121113
519-1691-01

Bring your life
thule.com



265 x4




319 x2



x1






1170 x2



x1

1


| | X (scale) | X (mm) | X (inch) |
|--|-----------|-------------|-----------|
| HONDA CR-V, 5-dr SUV, 12- (Without railing) | 44 | 1091 | 43 |

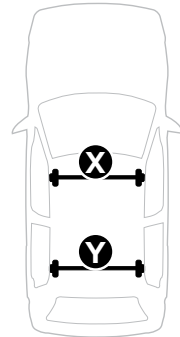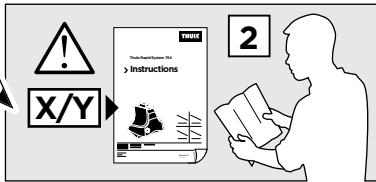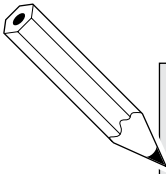


| | Y (scale) | Y (mm) | Y (inch) |
|--|-----------|-------------|-------------------------------------|
| HONDA CR-V, 5-dr SUV, 12- (Without railing) | 40 | 1051 | 41 ³/₈ |

2

HONDA CR-V, 5-dr SUV, 12- (Without railing)

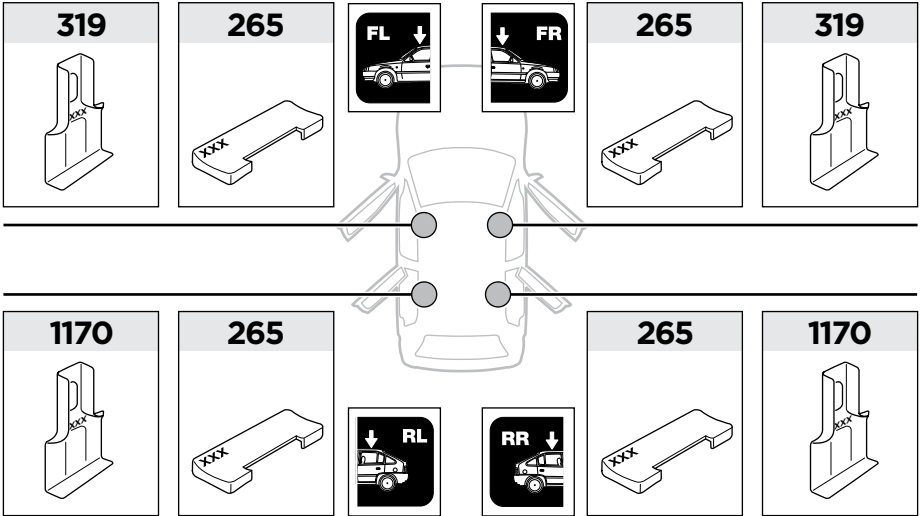

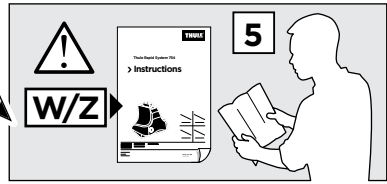3

| | W (mm) | Z (mm) | W (inch) | Z (inch) |
|--|------------|------------|-------------------------------------|-------------------------------------|
| HONDA CR-V, 5-dr SUV, 12- (Without railing) | 400 | 700 | 15 ³/₄ | 27 ¹/₂ |

