

**S06**

**DA300E**

**Serial No.**

MPREF	MPHIN	MPNAM	MPQ	MPC	MPQTY3	M	MPSRL2	MPSRL3	MPTAN	MPC5
		+++++++ MODEL:DA300E ++++++								0
		S06-01 CYLINDER/PISTON/CRANK								0
001	157-11666-90	SPARK PLUG CAP ASS'Y	1							0 *07
002	018-00546-21	SPARK PLUG BMR6A	1							0 42255
006	994-13050-101	SCREW 5X10/P	4							0
008	198-11109-20	CORD CLAMP L	1							0
009	016-10244-20	CYLINDER COVER	1							0
011	100-02100-20	STUD BOLT 6X22	2							0
012	994-61060-184	HEX. HOLE BOLT 6X18/S	4							0
015	001-10267-90	CYLINDER SET	1							0
016	017-10200-21	CYLINDER GASKET	1							0
017	040-10100-20	PISTON RING	1							0
018	041-10100-20	PISTON RING	1							0
019	030-10266-90	PISTON SET PN	1							0
020	037-10100-20	PISTON PIN	1							0
021	039-02000-20	PISTON PIN CIRCLIP	2							0
026	046-10244-81	CRANK SHAFT COMP.	1							0
027	999-62101-004	NEEDLE BRG F1010B 1.4X8.6	1							0
029	068-10100-20	WOOD-RUFF KEY 3X13X4.5	1							0
030	068-02000-20	WOOD-RUFF KEY 3X13X5	1							0
		S06-02 CRANK CASE								0
028	071-02007-23	CRANK SHAFT SHIM 0.20	V							0
028	071-02007-24	CRANK SHAFT SHIM 0.30	V							0
036	991-11100-013	SMALL NUT 10	1							0
037	801-10205-20	PULLEY WASHER	1							0
038	798-10205-20	STARTER PULLEY	1							0
046	072-10243-91	CRANK CASE ASS'Y	1							0
048	090-10200-21	CRANK CASE GASKET	1							0
049	999-66153-000	OIL SEAL 15307	1							0
050	999-61620-200	BALL BEARING #6202, 35MM/OD	1							0
051	999-61620-300	BALL BEARING #6203, 40MM/OD	1							0
052	999-66173-066	OIL SEAL UE17307	1							0
053	994-61060-304	HEX.HOLE BOLT 6X30/S	4							0
061	727-01040-20	DRAIN GASKET	1							0
062	990-11060-102	SCREW 6X10	1							0

066	369-10250-20	GOVERNOR SHAFT	1	0
067	367-10250-21	GOVERNOR SHAFT ARM	1	0
068	990-11030-061	SCREW 3X6	2	0
069	329-10250-20	OIL PARTITION	1	0
070	990-11040-081	SCREW 4X8	2	0
071	114-10250-91	GOVERNOR ASS'Y	1	0
072	388-10250-21	GOVERNOR PLATE	1	0
073	389-10250-21	GOVERNOR SLEEVE	1	0
074	993-50015-002	STOP RING C-15, OUTER S06-03 FAN CASE	1	0
075	385-10250-20	GOVERNOR COVER GASKET	1	0
076	384-10243-90	GOVERNOR COVER ASS'Y	1	0
077	999-66152-564	OIL SEAL UD15257	1	0
078	990-11040-101	SCREW 4X10	3	0
086	155-21715-80	MAGNETO ROTOR COMP.	1	0
087	992-01100-011	WASHER 10	1	0
088	991-09100-001	NUT 10 (L.H. THREAD)	1	0
089	994-16040-226	SCREW 4X22/WS	2	0
092	167-21954-80	IGNITION COIL COMP.	1	0
096	112-10244-21	FAN CASE	1	0
097	202-10200-20	GROMMET	1	0
098	198-05015-80	CORD CLAMP COMP.	1	0
100	994-14060-251	SCREW 6X25/S	4	0
116	100-04001-20	STUD BOLT 6X36	4	0
117	178-0136M-80	STOP CORD COMP. S06-04 ENGINE-1	1	0
021	403-10244-20	INLET MANIFOLD GASKET	1	0
022	404-10262-90	CARBURETOR INSULATOR SET	1	0
023	402-01740-20	CARBURETOR GASKET	1	0
024	994-16050-241	SCREW 5X24WS	2	0
031	495-04200-20	CHOKE LEVER	1	0
036	423-10244-21	CLEANER BODY	1	0
037	659-00801-20	COLLAR 5.8	2	0
038	994-14050-551	SCREW 5X55S	2	0
040	992-00050-011	SMALL WASHER 5	2	0
041	446-10244-20	SPONGE	1	0

042	424-10244-21	CLEANER CAP	1	0
045	455-10253-90	CARBURETOR SET HDA178	1	0
086	490-10244-20	THROTTLE ROD	1	0
087	376-12121-20	GOVERNOR ROD SPRING	1	0
088	377-10244-20	GOVERNOR OUTER LEVER	1	0
089	372-10250-20	GOVERNOR SPRING LEVER	1	0
090	992-10060-012	S.WASHER 6	1	0
091	991-01060-013	NUT 6	1	0
094	994-15040-081	SCREW 4X8/PS	1	0
095	374-10244-20	GOVERNOR SPRING	1	0
096	830-10244-90	CONTROL LEVER ASS'Y	1	0
097	994-16050-101	SCREW 5X10 WS	2	0
100	902-10244-20	WIRE RETURN SPRING	1	0
101	891-10244-20	THROTTLE SHAFT GUIDE	1	0
102	357-00601-20	STEP BOLT	1	0
103	903-10244-20	WIRE CLAMP	1	0
104	994-16050-101	SCREW 5X10 WS	1	0
107	991-74060-010	U-NUT 6	1	0
		S06-05 ENGINE-2		0
001	994-14060-081	SCREW 6X8/S	2	0
002	992-01060-011	WASHER 6	2	0
004	738-10244-20	MUFFLER PROTECTOR	1	0
005	733-10244-20	MUFFLER STAY	1	0
008	994-15060-121	SCREW 6X12/PS	1	0
009	706-10244-80	MUFFLER COMP.	1	0
010	991-01060-011	NUT 6	2	0
011	992-10060-012	S.WASHER 6	2	0
013	737-10100-20	MUFFLER GASKET	1	0
047	994-15050-181	SCREW 5X18/PS	4	0
056	603-02101-80	FUEL TANK BAND COMP.	2	0
058	591-10244-20	TANK	1	0
059	675-04042-80	PUMP FILTER BODY COMP.	1	0
060	680-0632S-90	HOSE CLIP ASS'Y	1	0
061	993-55060-000	STOP RING E-6	1	0
062	992-00080-011	SMALL WASHER 8	1	0
063	558-06020-20	PET-COCK HOLDING RUBBER	1	0

064	592-06020-90	PET-COCK ASS'Y	1	0
065	700-03005-23	FUEL PIPE 3X5X230	1	0
066	680-04019-21	CLIP 7	2	0
067	678-06020-20	RUBBER PIPE	1	0
071	655-10244-20	CUSHION RUBBER	2	0
072	607-10244-80	TANK HOLDING METAL COMP.	1	0
076	994-15060-121	SCREW 6X12/PS	4	0
080	595-01380-90	TANK CAP D ASS'Y, ORANGE	1	0
081	626-32550-20	TANK CAP CHAIN	1	0
111	359-10112-20	CLUTCH WASHER B	3	0
112	290-10112-80	CLUTCH ARM COMP.	3	0
113	358-10112-20	CLUTCH WASHER A	3	0
114	357-10112-20	CLUTCH STEP BOLT	3	0
115	342-10205-22	CLUTCH SPRING	3	0
		S06-06 RECOIL STARTER		0
000	762-10244-90	RECOIL STARTER BODY ASS'Y	1	0
001	772-10244-20	RECOIL STARTER BODY	1	0
002	779-10205-20	RECOIL SPRING	1	0
003	774-10246-80	STARTER ROPE REEL COMP.	1	0
004	783-10205-20	STARTER ROPE	1	0
005	788-10205-20	STARTER PAWL	1	0
006	836-10205-20	FRICITION SPRING	1	0
007	837-10205-20	FRICITION PLATE	1	0
008	990-21060-121	BOLT 6X12	1	0
009	835-10246-20	STARTER HANDLE CAP	1	0
010	795-10243-20	ROPE STOPPER	1	0
011	785-10118-20	STARTER HANDLE	1	0
012	780-10108-20	ROPE GUIDE	1	0
		S06-07 CARBURETOR		0
001	514-25001-20	SET SCREW	1	0
002	575-25012-20	PUMP BODY	1	0
003	577-25012-20	PUMP GASKET	1	0
004	576-25012-20	PUMP DIAPHRAGM	1	0
005	578-25007-20	INLET SCREEN	1	0
016	462-25006-20	IDLE ADJUST SCREW	1	0
017	463-25012-20	IDLE ADJUST SPRING	1	0

021	477-25088-20	VALVE SPRING	1	0
022	473-25012-20	CONTROL LEVER	1	0
023	605-25001-20	HINGE PIN	1	0
024	546-25001-20	HINGE PIN SET SCREW	1	0
025	603-25012-20	NEEDLE VALVE #	1	0
028	475-25012-20	DIAPHRAGM GASKET	1	0
029	474-25012-80	METERRING DIAPHRAGM COMP.	1	0
031	476-25012-20	DIAPHRAGM COVER	1	0
032	548-25012-20	SET SCREW	4	0
		S06-08 GEAR CASE		0
001	030-32203-80	CLUTCH SHAFT COMP.	1	0
002	068-10100-20	WOOD-RUFF KEY 3X13X4.5	1	0
003	008-32250-20	GEAR CASE C	1	0
005	994-40060-011	SPRING NUT 6	4	0
011	993-51032-002	STOP RING C-32, INNER	1	0
012	999-61600-202	BALL BEARING #6002Z, 32MM/OD	2	0
013	993-50015-002	STOP RING C-15, OUTER	1	0
014	002-32250-80	GEAR CASE A COMP.	1	0
015	992-10060-012	S.WASHER 6	4	0
016	990-51060-183	HEX. HOLE BOLT 6X18	4	0
021	300-32250-80	GREASE NIPPLE COMP.	1	0
024	404-32250-80	LOCK COMP.	1	0
025	403-32250-20	LOCK PIN SPRING	1	0
026	760-32250-20	WASHER	1	0
027	999-67007-000	O-RING P-7	1	0
028	994-16050-161	SCREW 5X16/WS	2	0
036	010-32201-20	GEAR 1	1	0
037	993-50010-002	STOP RING C-10, OUTER	1	0
038	993-50022-002	STOP RING C-22, OUTER	1	0
039	018-32250-20	GEAR 4	1	0
040	999-61620-200	BALL BEARING #6202, 35MM/OD	1	0
041	012-32250-20	GEAR 2	1	0
042	016-32201-20	GEAR 3	1	0
043	068-12101-20	WOOD-RUFF KEY 4X16X5	1	0
044	999-61620-000	BALL BEARING #6200, 30MM/OD	1	0
045	006-32250-20	GEAR CASE B	1	0


046	992-10060-012	S.WASHER 6	6	0
047	990-23060-221	PLUS BOLT 6X22	6	0
051	999-61302-050	ROLLER BRG #30205J 6.5X10.5	1	0
052	040-32250-20	BEARING STOPPER	1	0
053	999-61620-502	BALL BEARING #6205Z, 52MM/OD	1	0
054	992-09520-030	WAVE WASHER B.B.	1	0
055	993-51052-002	STOP RING C-52, INNER	1	0
056	022-32250-20	DRIVE SHAFT	1	0
058	820-32250-20	PIN	2	0
059	821-32203-20	SNAP PIN 8	2	0
		S06-09 HANDLE		0
001	256-32250-20	HANDLE	2	0
002	055-32250-20	HANDLE GRIP	4	0
004	266-32250-20	HANDLE BRACKET	2	0
005	991-01100-013	NUT 10	4	0
006	267-32250-80	KNOB COMP.	4	0
011	885-10244-80	THROTTLE WIRE COMP.	1	0
012	178-10244-80	STOP CORD COMP.	1	0
016	990-21060-351	BOLT 6X35	4	0
017	992-01060-011	WASHER 6	6	0
018	101-32250-80	THROTTLE LEVER COMP.	2	0
019	991-74060-010	U-NUT 6	4	0
020	064-33225-80	PUSH PIN COMP.	1	0
021	163-32250-20	STOP SWITCH BRACKET	2	0
022	162-01570-90	STOP SWITCH ASS'Y	2	0
023	183-01300-20	SWITCH NAME PLATE	2	0
026	599-00601-20	ANTI-VIBE RUBBER	1	0
030	198-33576-20	CORD CLAMP	3	0
031	903-32201-20	WIRE CLAMP BAND	1	0
032	164-13068-00	PROTECTION TUBE 13X680L	1	0
033	164-13050-00	PROTECTION TUBE 13X500L	1	0
		S06-10 TOOLS & OPTIONAL PARTS		0
001	013-29323-50	COMBI. BOX SPANNER 10X19	1	0
002	808-20000-20	SPANNER 10X13	1	0
003	862-20000-20	PLUS DRIVER 4	1	0
004	810-20000-20	SPANNER 13X17	1	0

		S06-11 DECALS		0
001	906-32255-21	NAME PLATE DA300E	1	0
004	921-32172-20	CAUTION MARK	1	0
005	920-32466-20	CAUTION MARK	1	0
		===== END OF DATA =====		0



**S06-01**


**DA300E CYLINDER/PISTON/CRANK SHAFT**

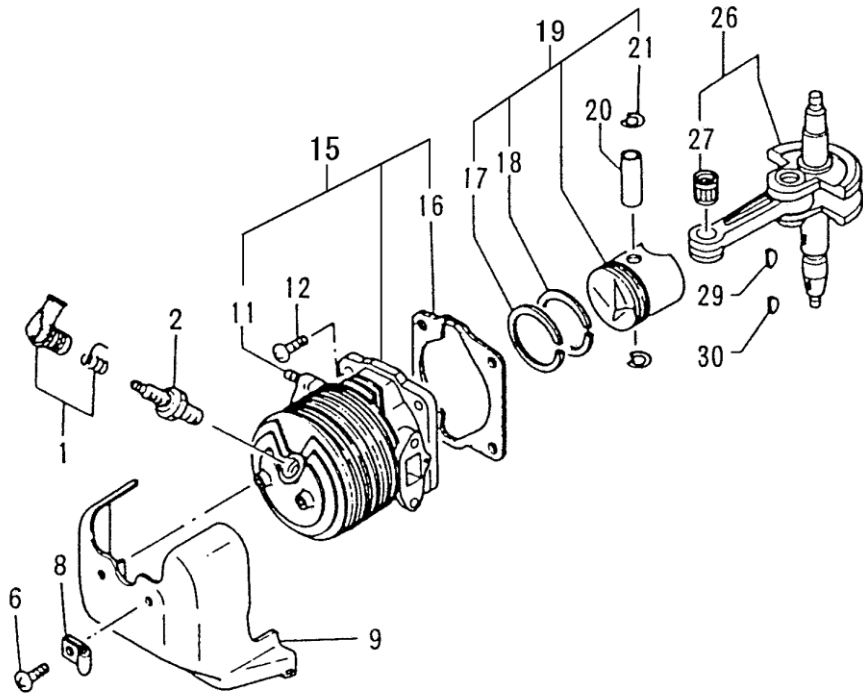

REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
001	157-11666-90	SPARK PLUG CAP ASS'Y	1	
002	018-00546-21	SPARK PLUG BMR6A	1	
006	994-13050-101	SCREW 5X10/P	4	
008	198-11109-20	CORD CLAMP L	1	
009	016-10244-20	CYLINDER COVER	1	
011	100-02100-20	STUD BOLT 6X22	2	
012	994-61060-184	HEX. HOLE BOLT 6X18/S	4	
015	001-10267-90	CYLINDER SET	1	
016	017-10200-21	CYLINDER GASKET	1	
017	040-10100-20	PISTON RING	1	
018	041-10100-20	PISTON RING	1	
019	030-10266-90	PISTON SET PN	1	
020	037-10100-20	PISTON PIN	1	
021	039-02000-20	PISTON PIN CIRCLIP	2	
026	046-10244-81	CRANK SHAFT COMP.	1	
027	999-62101-004	NEEDLE BRG F1010B 1.4X8.6	1	
029	068-10100-20	WOOD-RUFF KEY 3X13X4.5	1	
030	068-02000-20	WOOD-RUFF KEY 3X13X5	1	

**S06-02**


**DA300E CRANK CASE**

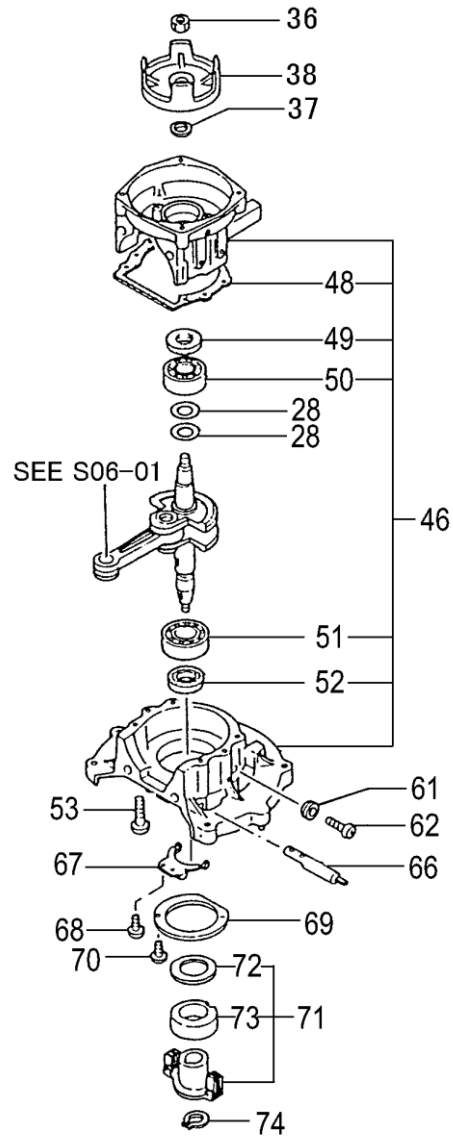

REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
028	071-02007-23	CRANK SHAFT SHIM 0.20	V	
028	071-02007-24	CRANK SHAFT SHIM 0.30	V	
036	991-11100-013	SMALL NUT 10	1	
037	801-10205-20	PULLEY WASHER	1	
038	798-10205-20	STARTER PULLEY	1	
046	072-10243-91	CRANK CASE ASS'Y	1	
048	090-10200-21	CRANK CASE GASKET	1	
049	999-66153-000	OIL SEAL 15307	1	
050	999-61620-200	BALL BEARING #6202, 35MM	1	
051	999-61620-300	BALL BEARING #6203, 40MM	1	
052	999-66173-066	OIL SEAL UE17307	1	
053	994-61060-304	HEX.HOLE BOLT 6X30/S	4	
061	727-01040-20	DRAIN GASKET	1	
062	990-11060-102	SCREW 6X10	1	
066	369-10250-20	GOVERNOR SHAFT	1	
067	367-10250-21	GOVERNOR SHAFT ARM	1	
068	990-11030-061	SCREW 3X6	2	
069	329-10250-20	OIL PARTITION	1	
070	990-11040-081	SCREW 4X8	2	
071	114-10250-91	GOVERNOR ASS'Y	1	
072	388-10250-21	GOVERNOR PLATE	1	
073	389-10250-21	GOVERNOR SLEEVE	1	
074	993-50015-002	STOP RING C-15, OUTER	1	


**S06-03**

**DA300E FAN CASE**

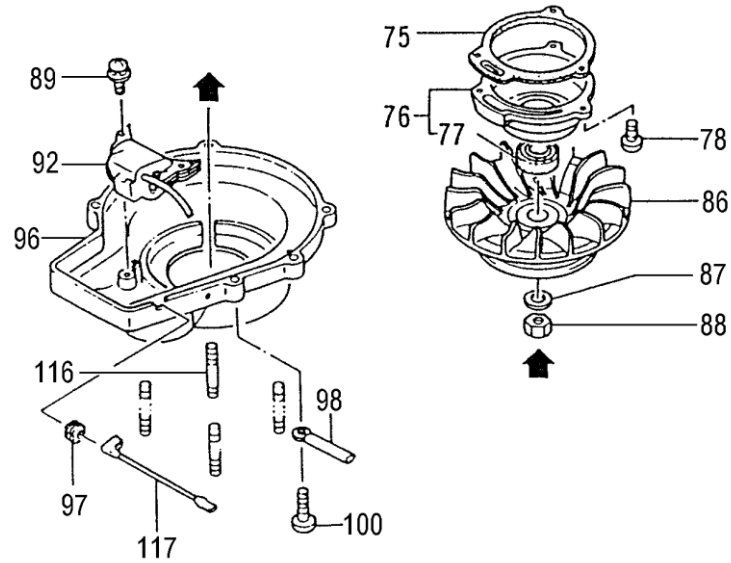


REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
075	385-10250-20	GOVERNOR COVER GASKET	1	
076	384-10243-90	GOVERNOR COVER ASS'Y	1	
077	999-66152-564	OIL SEAL UD15257	1	
078	990-11040-101	SCREW 4X10	3	
086	155-21715-80	MAGNETO ROTOR COMP.	1	
087	992-01100-011	WASHER 10	1	
088	991-09100-001	NUT 10 (L.H. THREAD)	1	
089	994-16040-226	SCREW 4X22/WS	2	
092	167-21954-80	IGNITION COIL COMP.	1	
096	112-10244-21	FAN CASE	1	
097	202-10200-20	GROMMET	1	
098	198-05015-80	CORD CLAMP COMP.	1	
100	994-14060-251	SCREW 6X25/S	4	
116	100-04001-20	STUD BOLT 6X36	4	
117	178-0136M-80	STOP CORD COMP.	1	

**S06-04 DA300E ENGINE-1**

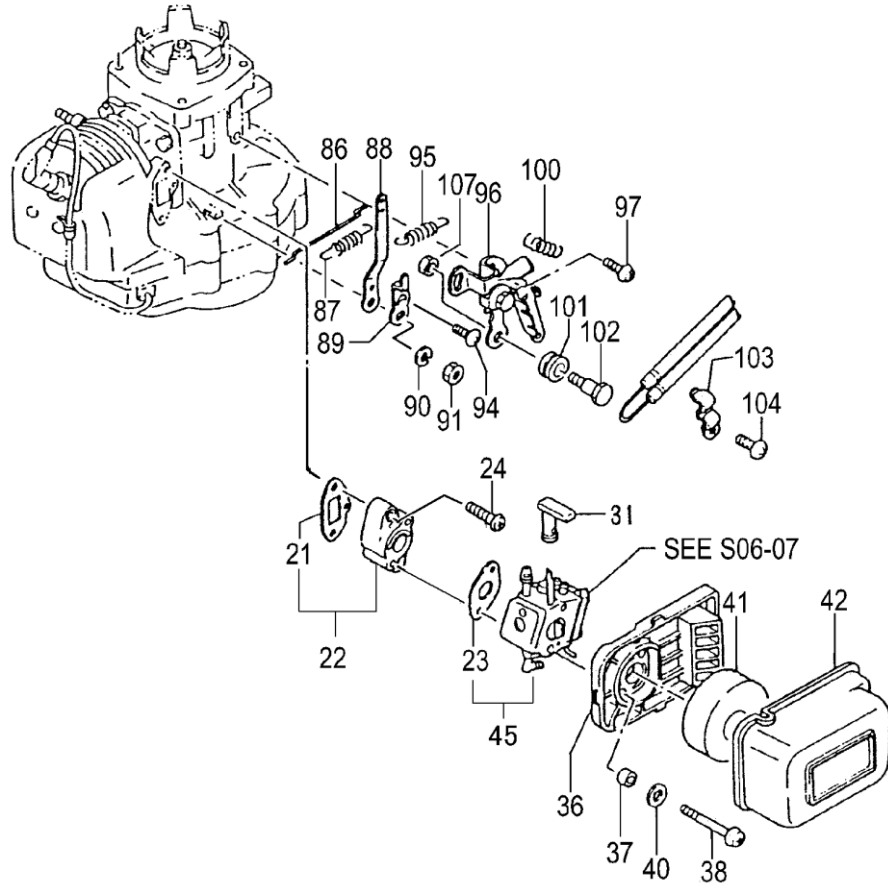


REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
021	403-10244-20	INLET MANIFOLD GASKET	1	
022	404-10262-90	CARBURETOR INSULATOR S	1	
023	402-01740-20	CARBURETOR GASKET	1	
024	994-16050-241	SCREW 5X24WS	2	
031	495-04200-20	CHOKE LEVER	1	
036	423-10244-21	CLEANER BODY	1	
037	659-00801-20	COLLAR 5.8	2	
038	994-14050-551	SCREW 5X55S	2	
040	992-00050-011	SMALL WASHER 5	2	
041	446-10244-20	SPONGE	1	
042	424-10244-21	CLEANER CAP	1	
045	455-10253-90	CARBURETOR SET HDA178	1	
086	490-10244-20	THROTTLE ROD	1	
087	376-12121-20	GOVERNOR ROD SPRING	1	
088	377-10244-20	GOVERNOR OUTER LEVER	1	
089	372-10250-20	GOVERNOR SPRING LEVER	1	
090	992-10060-012	S.WASHER 6	1	
091	991-01060-013	NUT 6	1	
094	994-15040-081	SCREW 4X8/PS	1	
095	374-10244-20	GOVERNOR SPRING	1	
096	830-10244-90	CONTROL LEVER ASS'Y	1	
097	994-16050-101	SCREW 5X10 WS	2	
100	902-10244-20	WIRE RETURN SPRING	1	
101	891-10244-20	THROTTLE SHAFT GUIDE	1	
102	357-00601-20	STEP BOLT	1	
103	903-10244-20	WIRE CLAMP	1	
104	994-16050-101	SCREW 5X10 WS	1	
107	991-74060-010	U-NUT 6	1	

**S06-05 DA300E ENGINE-2**

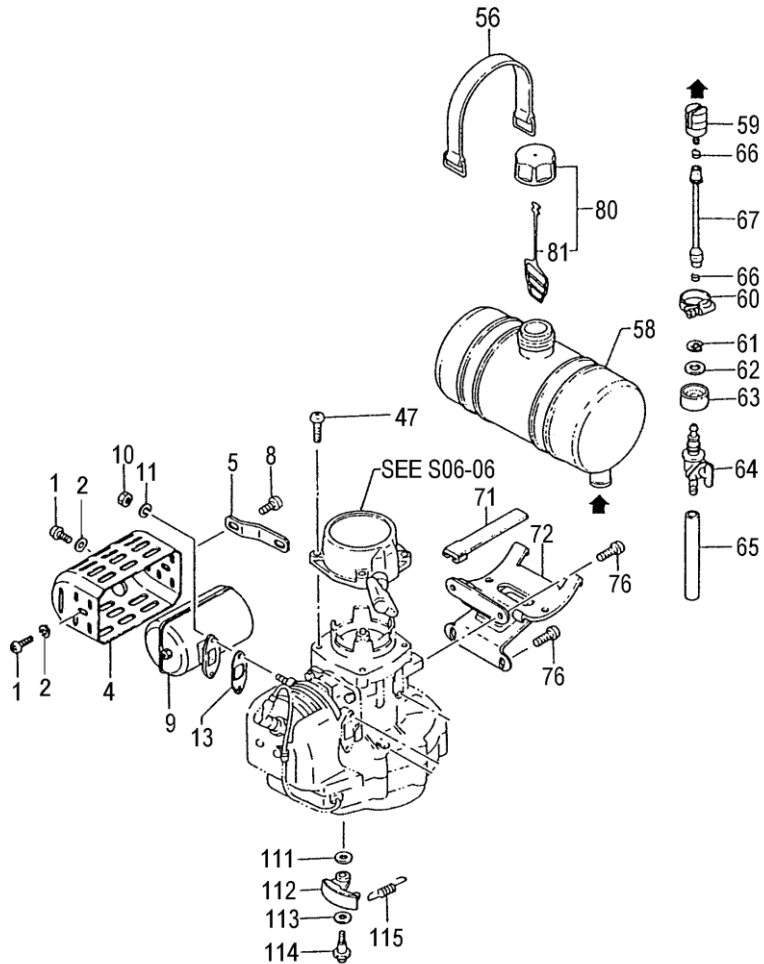


REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
001	994-14060-081	SCREW 6X8/S	2	
002	992-01060-011	WASHER 6	2	
004	738-10244-20	MUFFLER PROTECTOR	1	
005	733-10244-20	MUFFLER STAY	1	
008	994-15060-121	SCREW 6X12/PS	1	
009	706-10244-80	MUFFLER COMP.	1	
010	991-01060-011	NUT 6	2	
011	992-10060-012	S.WASHER 6	2	
013	737-10100-20	MUFFLER GASKET	1	
047	994-15050-181	SCREW 5X18/PS	4	
056	603-02101-80	FUEL TANK BAND COMP.	2	
058	591-10244-20	TANK	1	
059	675-04042-80	PUMP FILTER BODY COMP.	1	
060	680-0632S-90	HOSE CLIP ASS'Y	1	
061	993-55060-000	STOP RING E-6	1	
062	992-00080-011	SMALL WASHER 8	1	
063	558-06020-20	PET-COCK HOLDING RUBBER	1	
064	592-06020-90	PET-COCK ASS'Y	1	
065	700-03005-23	FUEL PIPE 3X5X230	1	
066	680-04019-21	CLIP 7	2	
067	678-06020-20	RUBBER PIPE	1	
071	655-10244-20	CUSHION RUBBER	2	
072	607-10244-80	TANK HOLDING METAL COM	1	
076	994-15060-121	SCREW 6X12/PS	4	
080	595-01380-90	TANK CAP D ASS'Y, ORANGE	1	
081	626-32550-20	TANK CAP CHAIN	1	
111	359-10112-20	CLUTCH WASHER B	3	
112	290-10112-80	CLUTCH ARM COMP.	3	
113	358-10112-20	CLUTCH WASHER A	3	
114	357-10112-20	CLUTCH STEP BOLT	3	
115	342-10205-22	CLUTCH SPRING	3	

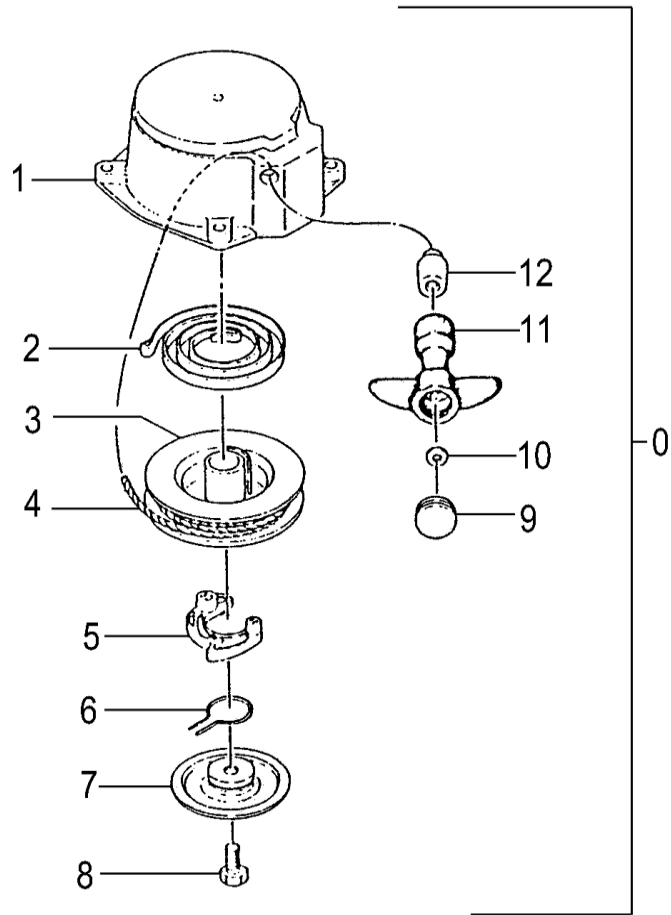**S06-06****DA300E RECOIL STARTER**


REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
000	762-10244-90	RECOIL STARTER BODY ASS	1	
001	772-10244-20	RECOIL STARTER BODY	1	
002	779-10205-20	RECOIL SPRING	1	
003	774-10246-80	STARTER ROPE REEL COMP	1	
004	783-10205-20	STARTER ROPE	1	
005	788-10205-20	STARTER PAWL	1	
006	836-10205-20	FRICTION SPRING	1	
007	837-10205-20	FRICTION PLATE	1	
008	990-21060-121	BOLT 6X12	1	
009	835-10246-20	STARTER HANDLE CAP	1	
010	795-10243-20	ROPE STOPPER	1	
011	785-10118-20	STARTER HANDLE	1	
012	780-10108-20	ROPE GUIDE	1	

**S06-07 DA300E CARBURETOR**

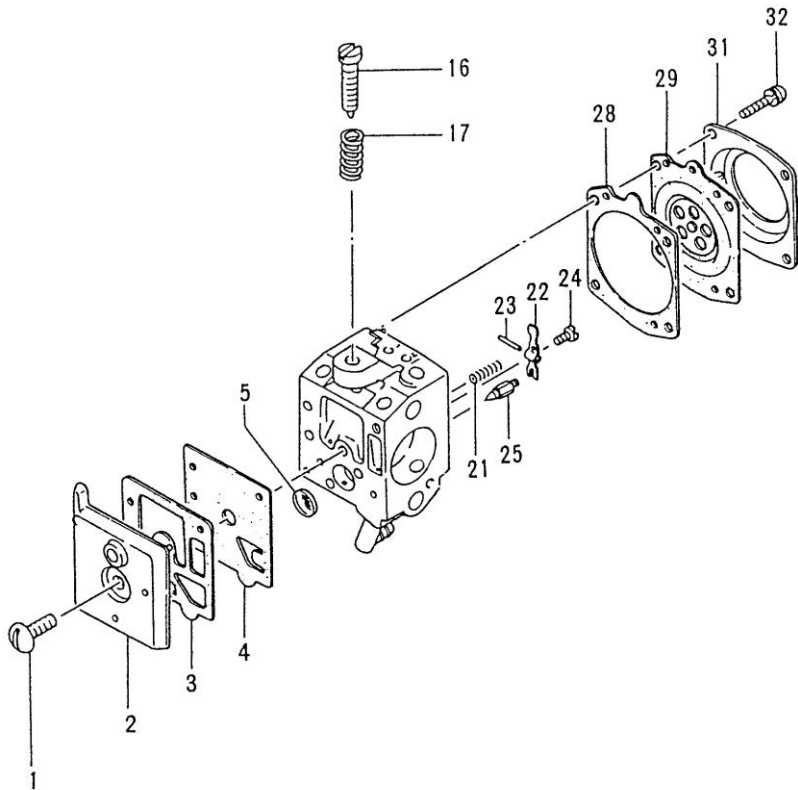

REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
001	514-25001-20	SET SCREW	1	
002	575-25012-20	PUMP BODY	1	
003	577-25012-20	PUMP GASKET	1	
004	576-25012-20	PUMP DIAPHRAGM	1	
005	578-25007-20	INLET SCREEN	1	
016	462-25006-20	IDLE ADJUST SCREW	1	
017	463-25012-20	IDLE ADJUST SPRING	1	
021	477-25088-20	VALVE SPRING	1	
022	473-25012-20	CONTROL LEVER	1	
023	605-25001-20	HINGE PIN	1	
024	546-25001-20	HINGE PIN SET SCREW	1	
025	603-25012-20	NEEDLE VALVE #	1	
028	475-25012-20	DIAPHRAGM GASKET	1	
029	474-25012-80	METERRING DIAPHRAGM CO	1	
031	476-25012-20	DIAPHRAGM COVER	1	
032	548-25012-20	SET SCREW	4	


**S06-08 DA300E GEAR CASE**

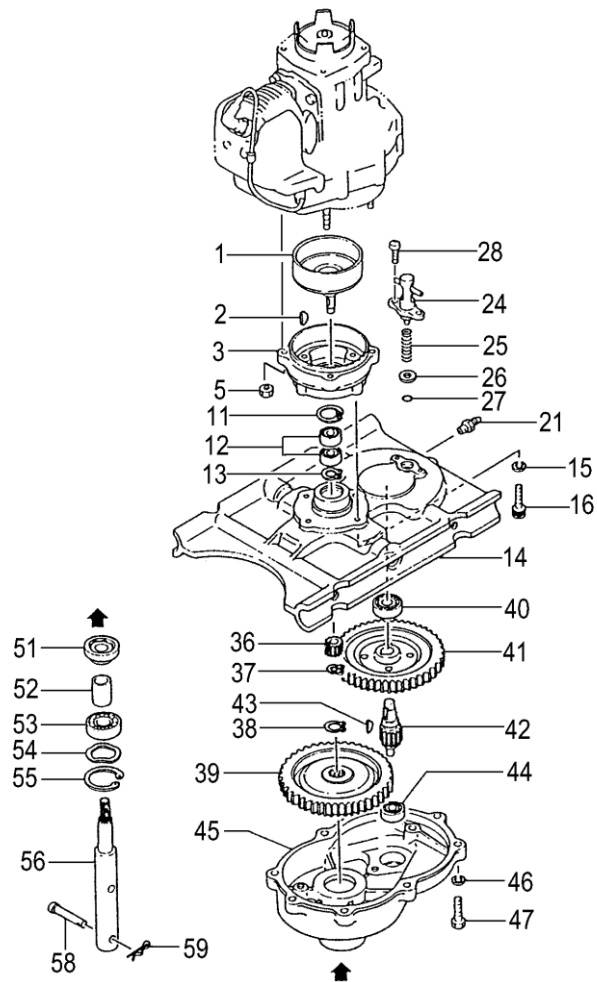

REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
001	030-32203-80	CLUTCH SHAFT COMP.	1	
002	068-10100-20	WOOD-RUFF KEY 3X13X4.5	1	
003	008-32250-20	GEAR CASE C	1	
005	994-40060-011	SPRING NUT 6	4	
011	993-51032-002	STOP RING C-32, INNER	1	
012	999-61600-202	BALL BEARING #6002Z, 32MM	2	
013	993-50015-002	STOP RING C-15, OUTER	1	
014	002-32250-80	GEAR CASE A COMP.	1	
015	992-10060-012	S.WASHER 6	4	
016	990-51060-183	HEX. HOLE BOLT 6X18	4	
021	300-32250-80	GREASE NIPPLE COMP.	1	
024	404-32250-80	LOCK COMP.	1	
025	403-32250-20	LOCK PIN SPRING	1	
026	760-32250-20	WASHER	1	
027	999-67007-000	O-RING P-7	1	
028	994-16050-161	SCREW 5X16/WS	2	
036	010-32201-20	GEAR 1	1	
037	993-50010-002	STOP RING C-10, OUTER	1	
038	993-50022-002	STOP RING C-22, OUTER	1	
039	018-32250-20	GEAR 4	1	
040	999-61620-200	BALL BEARING #6202, 35MM	1	
041	012-32250-20	GEAR 2	1	
042	016-32201-20	GEAR 3	1	
043	068-12101-20	WOOD-RUFF KEY 4X16X5	1	
044	999-61620-000	BALL BEARING #6200, 30MM	1	
045	006-32250-20	GEAR CASE B	1	
046	992-10060-012	S.WASHER 6	6	
047	990-23060-221	PLUS BOLT 6X22	6	
051	999-61302-050	ROLLER BRG #30205J 6.5X10	1	
052	040-32250-20	BEARING STOPPER	1	
053	999-61620-502	BALL BEARING #6205Z, 52MM	1	
054	992-09520-030	WAVE WASHER B.B.	1	
055	993-51052-002	STOP RING C-52, INNER	1	
056	022-32250-20	DRIVE SHAFT	1	
058	820-32250-20	PIN	2	
059	821-32203-20	SNAP PIN 8	2	







**S06-09 DA300E HANDLE**

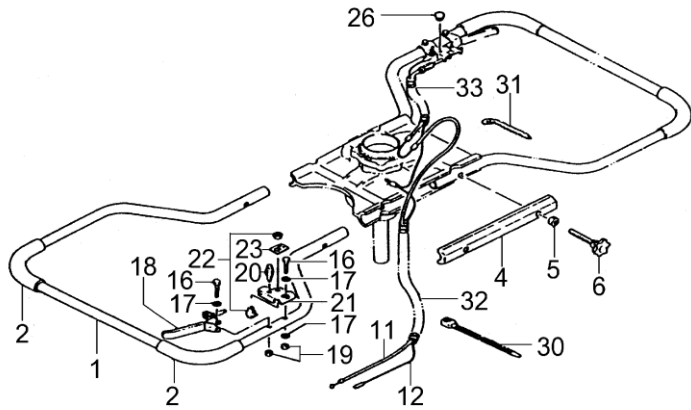


REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
001	256-32250-20	HANDLE	2	
002	055-32250-20	HANDLE GRIP	4	
004	266-32250-20	HANDLE BRACKET	2	
005	991-01100-013	NUT 10	4	
006	267-32250-80	KNOB COMP.	4	
011	885-10244-80	THROTTLE WIRE COMP.	1	
012	178-10244-80	STOP CORD COMP.	1	
016	990-21060-351	BOLT 6X35	4	
017	992-01060-011	WASHER 6	6	
018	101-32250-80	THROTTLE LEVER COMP.	2	
019	991-74060-010	U-NUT 6	4	
020	064-33225-80	PUSH PIN COMP.	1	
021	163-32250-20	STOP SWITCH BRACKET	2	
022	162-01570-90	STOP SWITCH ASS'Y	2	
023	183-01300-20	SWITCH NAME PLATE	2	
026	599-00601-20	ANTI-VIBE RUBBER	1	
030	198-33576-20	CORD CLAMP	3	
031	903-32201-20	WIRE CLAMP BAND	1	
032	164-13068-00	PROTECTION TUBE 13X680L	1	
033	164-13050-00	PROTECTION TUBE 13X500L	1	

**S06-10 DA300E TOOLS & OPTIONAL PARTS**

REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
001	013-29323-50	COMBI. BOX SPANNER 10X13	1	
002	808-20000-20	SPANNER 10X13	1	
003	862-20000-20	PLUS DRIVER 4	1	
004	810-20000-20	SPANNER 13X17	1	

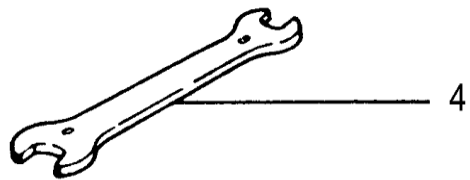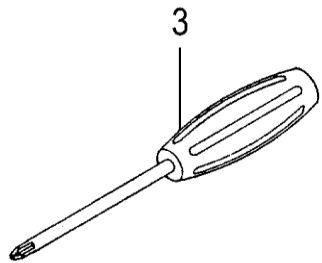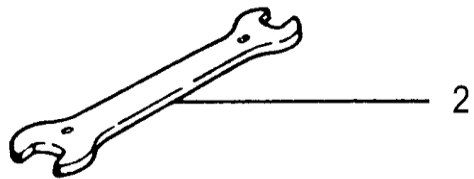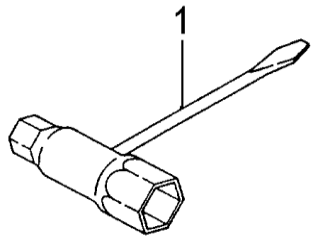

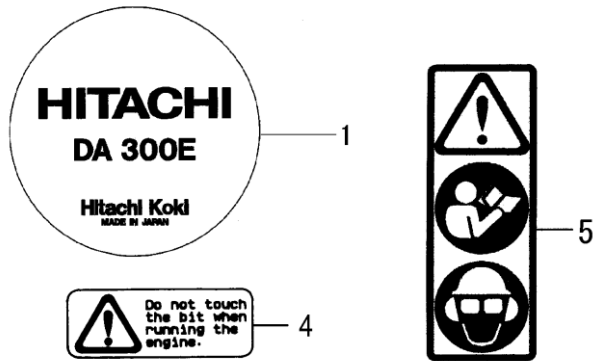**S06-11****DA300E LABELS**

REF. NUMBER	PARTS NUMBER	DESCRIPTION	Q'TY	SERIAL NUMBER
001	906-32255-21	NAME PLATE DA300E	1	
004	921-32172-20	CAUTION MARK	1	
005	920-32466-20	CAUTION MARK	1	